


# 冷氣機 遙控器使用說明書

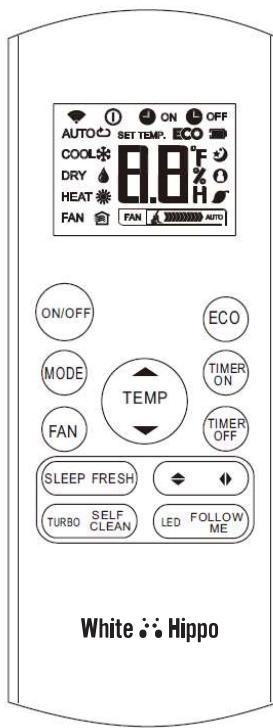

\*使用本產品前，請仔細閱讀本說明書，  
並妥善保存，以備日後參考查閱。



## 目 錄

規格表 .....	2
遙控器上按鈕的作用 .....	3
顯示屏的指示 .....	6
使用方法 .....	7
遙控器的處理 .....	12

注意：

遙控器按鍵設計是基於典型的型號，可能與實際購買的樣式略有不同，  
以實際形狀為準。


描述的所有功能都由所購買的製冷產品完成。如果該產品沒有此功能，  
按遙控器上的相關按鈕時，不會發生相應的操作。

## 規格表

額定電壓	3.0V ( 兩節 R03/LR03 乾電池 )
信號到達距離	8 米
使用條件	-5°C ~ 60°C



## 遙控器上按鈕的作用

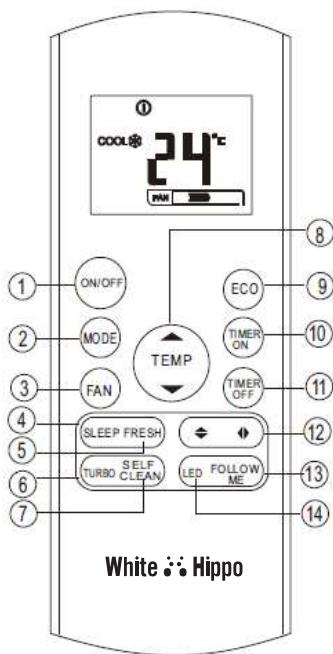

① **開/關按鈕(ON/OFF):** 按此按鈕，冷氣機便開始運轉；再按此按鈕，冷氣機便停止運。

② **模式選擇按鈕(MODE):** 每按一次按鈕，運行模式就按下列依次變化：



③ **風速選擇按鈕(FAN):** 用於選擇風速，每按一次按鈕，風速就按下述依次變化：



注意：在抽濕模式時無法調整風速。

④ **睡眠按鈕(SLEEP):** 按此按鈕，選擇進入睡眠運行模式。

注意：只有在製冷模式下可應用此模式。當產品在睡眠模式下運行時，如果按下任意 MODE, FAN ON/OFF 按鈕，則會取消該功能。

⑤ **新鮮風(FRESH):** 按下此按鈕，啟動UV，有助殺滅空氣中細菌及病毒。

⑥ **加強模式按鈕(TURBO):** 按下此按鈕，產品會在條件允許的最大頻率下運行，使設備在最短的時間內達到預設溫度。

**⑦ 自我清潔(SELF CLEAN):** 激活和關閉自我清潔功能。

空氣中的細菌可以在單元中熱交換器周圍凝結的水分中生長。經常使用後，大部分水分會從裝置中蒸發掉。按自我清潔(SELF CLEAN)按鈕，您的設備將自動清潔。清潔後，設備將自動關閉。在循環中間按自我清潔(SELF CLEAN)按鈕將取消操作並關閉設備。您可以根據需要隨時使用自我清潔。  
注意：您只能在 COOL 或 DRY 模式下激活此功能。

**⑧ 提溫按鈕 (TEMP ▲)：**按此按鈕可將室內溫度設置以 1°C 為增量增加到 30°C。

**降溫按鈕 (TEMP▼)：**按下此按鈕將室內溫度設置以 1°C 增量降低到 17°C  
注意：溫度控制不適用於在“FAN”模式下使用。

**⑨ 節能按鈕 (ECO)：**用於進入節能模式。在製冷模式下，按這個按鈕，遙控器將自動調整溫度到 24°C，風扇速度為自動，以節省能源（但只有在設定溫度低於 24°C 時）。如果設定溫度在 24°C 和 30°C 之間，按下 ECO 按鈕，風扇速度將變為自動，設定溫度將保持不變。

注意：

- 1、按下 TURBO 和 SLEEP 按鈕，修改模式或將設定溫度調至低於 24°C，將停止 ECO 操作。
- 2、在 ECO 操作下，設定溫度應在 24°C 或以上，但這可能會導致製冷不足。如果你感到不舒服，只需再次按下 ECO 按鈕即可停止。

**⑩ 定時開機按鈕 (TIMER ON)：**按此按鈕，開啟自動啟動時間順序。每按一次，將以 30 分鐘的增量增加自動定時設置。當設置時間顯示“10.0”，每次按下將增加自動定時設置 60 分鐘增量。要取消自動定時程序，只需將自動啟動時間調整為“0.0”。

**⑪ 定時停機按鈕(TIMER OFF)：**按此按鈕，啟動自動關閉時間順序。每按一次，將以 30 分鐘的增量增加自動定時設置。當設置時間顯示“10.0”，每次按下將增加自動定時設置 60 分鐘增量。要取消自動定時程序，只需調整自動關機時間至“0.0”。

**(12) 擺動按鈕(◀▶) :**

用於停止或啟動垂直送風葉運動，並設定所需的左/右氣流方向。每按一次，垂直送風葉的角度就會改變6度。如果按住這個按鈕超過2秒，送風葉會自動左右擺動。

**擺動按鈕(◀) :**


用於停止或啟動水平送風葉運動或設定所需的上/下氣流方向。每按一次，送風葉就會改變6度的角度。如果按住這個按鈕超過2秒，送風葉會自動上下擺動。此按鈕不適用型號：FWAD08IR23，FWAD10IR23 和 FWAD13IR23。

**(13) 涼風追蹤(FOLLOW ME):**按此按鈕啟動涼風追蹤功能，遠程顯示其位置的實際溫度。遙控器將每3分鐘間隔發送一次信號到冷氣機，直到再次按下“FOLLOW ME”按鈕。如果7分鐘間隔內沒有收到信號，冷氣機將自動取消“涼風追蹤”功能。

**(14) LED 按鈕：**關閉/開啟冷氣機屏幕顯示。當按下按鈕時，冷氣機屏幕顯示被關閉，再次按下可以開啟顯示。

## 顯示屏的指示

當遙控器亮著時的顯示信息

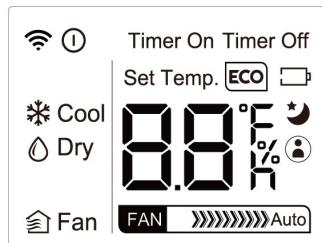

模式顯示：

自動 ⌂ 製冷 ❄  
除濕 ⚡ 送風 ⌂

Wi-Fi 數據傳輸時顯示。

① 當遙控器開啟時顯示。

電池顯示 (低電量檢測)

ECO 節能模式

⌚ ON TIMER ON 時間設置時顯示

⌚ OFF TIMER OFF 時間設置時顯示

8.8°F 顯示設定溫度或室溫，或在 TIMER  
設置下顯示時間。

🌙 在睡眠模式下顯示操作。

👤 表示冷氣機在涼風追蹤模式下運行

風速指示：


FAN	»	低速
FAN	»»	中速
FAN	»»»	高速
FAN	AUTO	自動

注意：

圖中所示的所有指標均以清晰的介紹為目的。但是在實際操作中，只有顯示屏上顯示相對的功能符號。

## 使用方法

### 製冷/送風操作方法

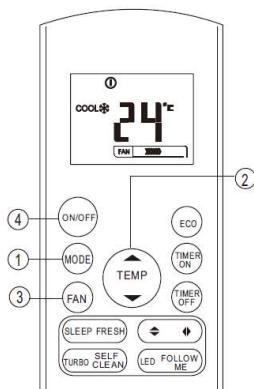

1.按 MODE 按鈕選擇製冷 (COOL)或送風(FAN)模式。


2.按 UP / DOWN 按鈕設置所需的溫度。溫度可以設置在 17°C ~ 30°C 的範圍內，以 1°C 為增減。

3.按 FAN 按鈕以四個步驟選擇風速：自動、低速、中速或高速。

4.按 ON / OFF 按鈕啟動冷氣機。

注意：在“FAN”操作模式下，不能設定溫度，選擇這一模式時只進行 1、3、4 步驟。

### 抽濕運行操作方法

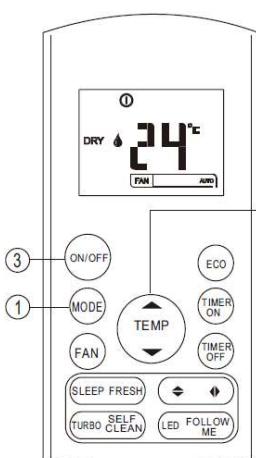


1.按 MODE 按鈕選擇 DRY 模式。

2.按 UP / DOWN 按鈕設置所需的溫度。溫度可以設置在 17°C ~ 30°C 的範圍內，以 1°C 為增減。

② 3.按 ON / OFF 按鈕啟動冷氣機。

注意：在抽濕模式下，風速設定為自動控制。

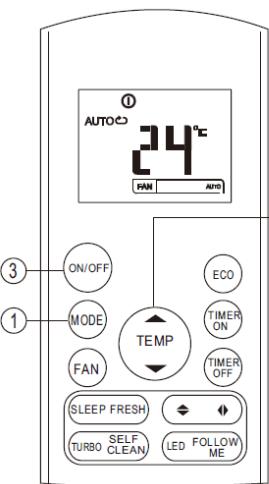


## 自動模式操作方法

- 1.按 MODE 按鈕選擇 AUTO 。
- 2.按 UP / DOWN 按鈕設置所需的溫度。溫度可以設置在 17°C~30°C的範圍內，以 1°C為增減 。
- 3.按 ON / OFF 按鈕啟動冷氣機 。

注意：

- 1.在自動模式下，冷氣機可以通過檢測實際環境溫度與遙控器上的設定溫度之間的差異來邏輯選擇製冷和送風模式 。
- 2.在自動模式下，風速設定為自動控制 。
- 3.若 AUTO 模式運行使您感到不適，可手動選擇其他運行模式 。

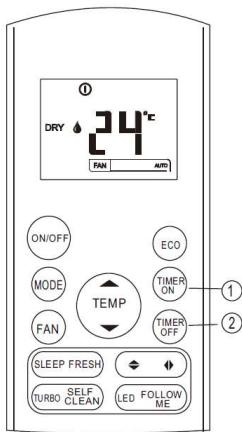


## 定時操作

### 定時開機的設定

- 1按下 TIMER ON 按鈕。遙控器顯示 TIMER ON，上次自動開機設定時間和信號“H”將顯示在 LCD 顯示屏。現在，您可以重新啟動自動啟動操作。
2. 再次按下 TIMER ON 按鈕設置所需的自動啟動時間。每次按下按鈕，時間在 0 到 10 小時之間增加半小時，在 10 到 24 小時之間增加 1 小時。
3. 在設置 TIMER 開啟之後，遙控器將延遲一秒鐘傳送信號到冷氣機。然後，經過大約 2 秒鐘後，信號 “H” 將消失，設定溫度將重新出現在 LCD 顯示屏上。

### 定時關機的設定


- 1.按 TIMER OFF 按鈕。遙控器顯示 TIMER OFF，上次自動關機設定時間和信號 “H” 將顯示在 LCD 顯示屏。現在，您可以重新設置自動關機時間來停止操作。
- 2.再次按下 TIMER OFF 按鈕設置所需的自動關機時間。每次按下按鈕，時間在 0 到 10 小時之間增加半小時，在 10 到 24 小時之間增加 1 小時。
- 3.在設置 TIMER 關閉後，遙控器將延遲一秒鐘傳送信號到冷氣機。然後，經過大約 2 秒鐘後，信號 “H” 將消失，設定溫度將重新出現在 LCD 顯示屏上。

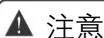

注意

- 由遙控器為定時器功能設置的有效操作時間限制為以下設置：0.5, 1.0, 1.5, 2.0, 2.5, 3.0, 3.5, 4.0, 4.5, 5.0, 5.5, 6.0, 6.5, 7.0, 7.5, 8.0, 8.5, 9.0, 9.5, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23 及 24.

## 定時器設置示例

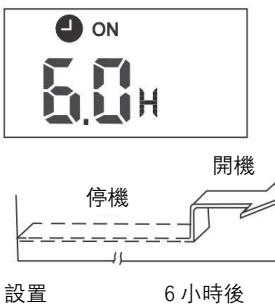

**定時開啟 (自動開機操作)** 當您希望本機在您返回之前自動打開時，TIMER ON 功能非常有用。冷氣機將在設定的時間自動開始運行。

例如：在 6 小時後啟動冷氣機。

1. 按 TIMER ON 按鈕，開始運行時間的最後一個設置和信號“H”將顯示在顯示屏。

2. 按下 TIMER ON 按鈕，在遙控器的 TIMER ON 顯示屏上顯示“6.0H”。

3. 等待 3 秒鐘，數碼顯示屏再次顯示溫度。“TIMER ON”指示燈保持開啟及此功能被開啟。

**定時關機 (自動關機操作)** 當您想要在睡覺後自動關閉本機時，TIMER OFF 功能非常有用。冷氣機將在設定時間內自動停機。


例如：在 10 小時內停機。

1. 按 TIMER OFF 按鈕，停止運行時間的最後一個設置和信號“H”將顯示在顯示屏。

2. 按下 TIMER OFF 按鈕，在遙控器的 TIMER OFF 顯示屏上顯示“10H”。

3. 等待 3 秒鐘，數碼顯示屏再次顯示溫度。

“TIMER OFF”指示燈保持開啟及此功能被開啟。

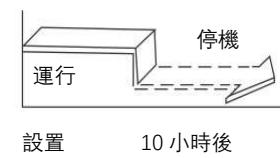

**組合定時器 (同時設置 ON 和 OFF 定時器)**

**定時關機→定時開啟。**

當您想在睡覺後關閉空調，並在早上醒來或回家時再次啟動時，此功能很有用。

例如：

設置後 2 小時停止冷氣機，設置後 10 小時再次啟動。

- 1.按 TIMER OFF 按鈕。
- 2.再次按下 TIMER OFF 按鈕，在 TIMER OFF 顯示屏上顯示 2.0H。
- 3.按下 TIMER ON 按鈕。
- 4.再次按下 TIMER ON 按鈕，在 TIMER ON 顯示屏上顯示 10H。
- 5.等待 3 秒鐘，數碼顯示屏再次顯示溫度。  
“TIMER ON 和 TIME OFF” 指示燈保持開啟及此功能被開啟。

#### 定時開機→定時關機



當您想在起床前啟動冷氣機並在離開家後停止冷氣機時，此功能非常有用。

例如：

設置後 2 小時啟動冷氣機，設置後 5 小時停止。

- 1.按下 TIMER ON 按鈕。
- 2.再次按下 TIMER ON 按鈕，在 TIMER ON 顯示屏上顯示 2.0H。
- 3.按下 TIMER OFF 按鈕。
- 4.再次按下 TIMER OFF 按鈕，在 TIMER OFF 設置顯示屏上顯示 5.0H。
- 5.等待 3 秒鐘，數碼顯示屏再次顯示溫度。  
“TIMER ON 和 TIMER OFF” 指示燈保持開啟及此功能被開啟。

## 遙控器的處理

### 遙控器的使用範圍




使用距離設備 8 米遠的遙控器，將其指向接收器。接收是由“嗶”聲確認。




- 如果窗簾・門或其他材料將遙控器的信號阻擋到室內機・冷氣機將不起作用。
- 防止任何液體落入遙控器。請勿將遙控器暴露在陽光直射或熱的地方。
- 如果室內機的紅外線信號接收器暴露在陽光直射下，冷氣機可能無法正常工作。使用窗簾防止陽光落在接收器上。
- 如果其他電器對遙控器做出反應，請移動這些設備或諮詢當地的經銷商。
- 不要丟棄遙控器。小心輕放。
- 請勿將重物放在遙控器上。

### 使用遙控器支架（可選）

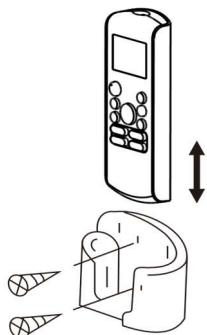

- 遙控器可以通過使用遙控器支架（不提供，單獨購買）連接到牆壁或支柱。
- 在安裝遙控器支架之前，請確認冷氣機正確接收到信號。
- 用兩個螺釘安裝遙控器支架。
- 要安裝或拆卸遙控器，請在支架上向上或向下移動遙控器。

## 更換電池

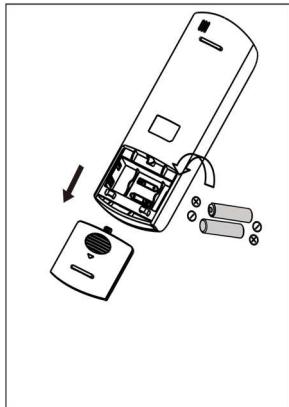

以下情況表示電池電量已經耗盡，用新的電池更換掉舊電池。

- 發送信號時不會發出接收到的嗶聲。
- 指示燈消失。

遙控器由兩個裝在後部的乾電池 ( R03 / LR03X2 ) 供電，並由蓋子保護。

- (1) 拆下遙控器後部的蓋子。
- (2) 取出舊電池並插入新電池，將 ( + ) 和 ( - ) 端正確放置。
- (3) 重新安裝蓋子。

注意：取出電池後，遙控器將清除所有設置。插入新電池後，遙控器必須重新設置。

### ⚠ 注意事項


- 不要混合新舊電池或不同類型的電池。
- 如果用 2 或 3 個月或更長時間都不再使用遙控器，請取出電池。
- 不要將電池作為未分類的城市垃圾處理。  
收集這些廢物需要特別處理。

設計和規格如有更改，恕不另行通知。

有關詳細信息，請諮詢銷售代理商或製造商。

# AIR CONDITIONER

## REMOTE CONTROL USER MANUAL

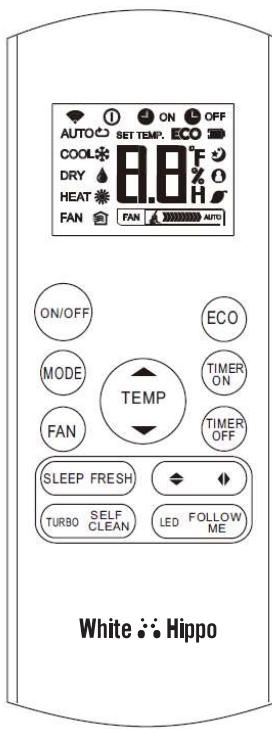

\* Before operating the unit, please read this manual thoroughly and retain it for future reference.



## **CONTENTS**


Specifications .....	2
Feature of the remote control buttons .....	3
Display panel indicators .....	6
Operation instruction .....	7
Handling the remote control .....	12

### **NOTE:**


- Buttons design is based on typical model and might be slightly different from the actual one you purchased, the actual shape shall prevail.
- All the functions described are accomplished by the unit. If the unit does not have certain feature, there will be no corresponding operation happened when pressing the relative button on the remote control.

## Specifications

Rated Voltage	3.0V(Dry batteries R03/LR03×2)
Signal Receiving Range	8m
Environment	-5°C ~60°C

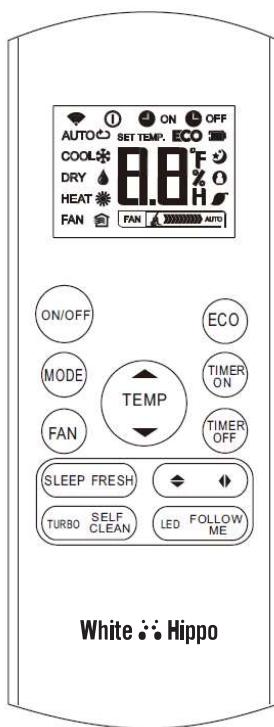

## Feature of the remote control buttons

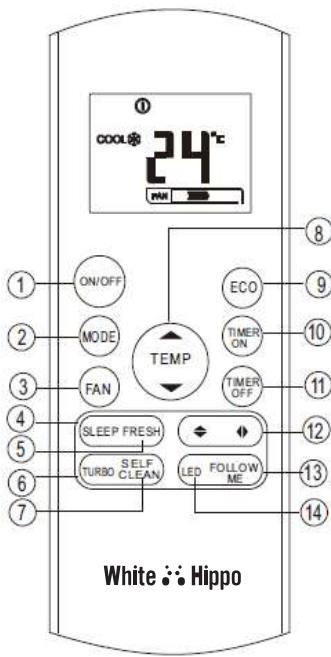

① **ON/OFF Button:** This button turns the air conditioner ON and OFF.

② **MODE Button:** Press this button to modify the air conditioner mode in a sequence of following:



③ **FAN Button:** To select the fan speed in four steps:



NOTE: You cannot switch the fan speed in DRY mode

④ **SLEEP Button:** Activate/Deactivate sleep function.

NOTE: While the unit is running under SLEEP mode, it would be cancelled if MODE, FAN SPEED or ON/OFF button is pressed.

⑤ **FRESH Button:** Press this button to activate UV which helps to kill bacteria and viruses in the air.

⑥ **TURBO Button:** Activate/Deactivate Turbo function. Turbo function enables the unit to reach the preset temperature at cooling operation in the shortest time.

- ⑦ **SELF CLEAN Button:** Starts and stops self-clean feature. Airborne bacteria can grow in the moisture that condenses around heat exchanger in the unit. With regular use, most of this moisture is evaporated from the unit. By pressing the CLEAN button, your unit will clean itself automatically. After cleaning, the unit will turn off automatically. Pressing the CLEAN button mid-cycle will cancel the operation and turn off the unit. You can use CLEAN as often as you like. Note: You can only activate this function in COOL or DRY mode.
- ⑧ **UP Button (▲) :** Press this button to increase the indoor temperature setting in 1°C increments to 30°C.
- DOWN Button (▼) :** Press this button to decrease the indoor temperature setting in 1°C increments to 17°C.
- Note: Temperature cannot be adjusted in FAN mode.
- ⑨ **ECO Button :** Used to enter the energy efficient mode. Under cooling mode, press this button, the remote control will adjust the temperature automatically to 24°C. Auto fan speed to save energy(but only if the set temperature is less than 24°C). If the set temperature is between 24°C and 30°C, press the ECO button. the fan speed will change to Auto, the set temperature will remain unchanged. NOTE:
- 1.Pressing the TURBO and SLEEP button, modifying the mode or adjusting the set temperature to less than 24°C will stop ECO operation.
  - 2.Under ECO operation, the set temperature should be 24°C or more,but it may result in insufficient cooling. If you feel uncomfortable, just press the ECO button again to stop it.
- ⑩ **TIMER ON Button :** Press this button to initiate the auto-on time sequence. Each press will increase the auto-timed setting in 30 minutes increments. When the setting time displays “10.0”, each press will increase the auto-timed setting 60 minutes increments. To cancel the auto-timed program, simply adjust the auto-on time to “0.0”.
- ⑪ **TIMER OFF Button :** Press this button to initiate the auto-off time sequence. Each press will increase the auto-timed setting in 30 minutes increments.

When the setting time displays 10.0, each press will increase the auto-timed setting 60 minutes increments. To cancel the auto-timed program, simply adjust the auto-off time to 0.0.

- (12) **Swing (◀▶) Button** : Used to stop or start vertical louver movement and set the desired left/right air flow direction. The vertical louver changes 6 degree in angle for each press. If hold down this button for more than 2 seconds, the louver will swing left and right automatically.


#### **Swing (◀▶) Button :**

Used to stop or start horizontal louver movement or set the desired up/down air flow direction. The louver changes 6 degree in angle for each press. If hold down this button for more than 2 seconds, the louver will swing up and down automatically. It is not suitable for this model: FWAD08IR23, FWAD10IR23 and FWAD13IR23.

- (13) **Follow Me Button** : Push this button to initiate the Follow Me feature, the remote display is actual temperature at its location. The remote control will send this signal to the air conditioner every 3 minutes interval until press the Follow Me button again. The air conditioner will cancel the Follow Me feature automatically if it does not receive the signal during any 7 minutes interval.
- (14) **LED Button** : Activate/Deactivate unit screen Display. When pressing the button, the unit screen display will be deactivated, press it again to activate the display.

## Display panel indicators

Information are displayed when the remote control is powered up.

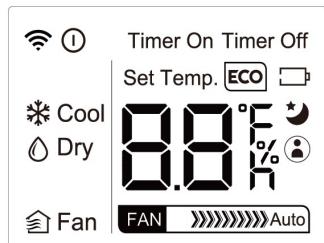

### Mode display



Displayed when data transmitted.

Displayed when remote control is ON.

Battery display (low battery detection).

**ECO** Energy efficient mode.

ON Displayed when TIMER ON time is set.

OFF Displayed when TIMER OFF time is set.

Show set temperature or room temperature, or time under TIMER setting.

Displayed in Sleep Mode operation.

Indicated that the air condition is operating in Follow me mode


### Fan speed indication

	Low speed
	Medium speed
	High speed
	Auto speed

#### Note:

All indicators shown in the figure are for the purpose of clear presentation. But during the actual operation only the relative functional signs will be shown on the display.

## Operation instruction

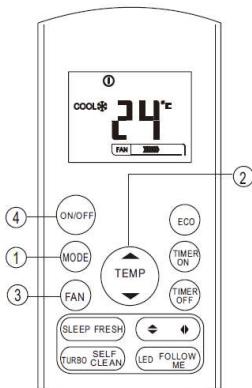


### Cooling / Fan mode operation

Ensure the unit is plugged in and power is available.

1. Press the MODE button to select COOL or FAN mode.
2. Press the UP/DOWN buttons to set the desired temperature. The temperature can be set within a range of 17°C ~ 30°C in 1°C increments or decrements.
3. Press the FAN button to select the fan speed in four steps- Auto, Low, Med, or High.
4. Press the ON/OFF button to start the air conditioner.

#### NOTE

Temperature cannot be adjusted in FAN mode, thus only process step 1, 3 and 4 when running in FAN mode.

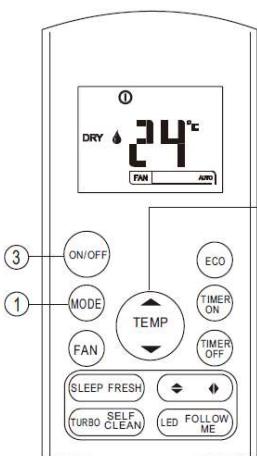


### DRY operation

1. Press the MODE button to select DRY mode.
2. Press the UP/DOWN buttons to set the desired temperature. The temperature can be set within a range of 17°C ~ 30°C in 1°C increments or decrements.
3. Press the ON/OFF button to start the air conditioner.

#### NOTE:

In the DRY mode, the fan speed will be automatically set.

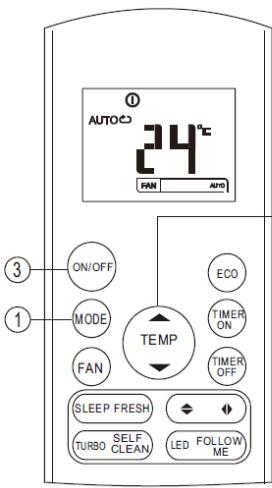


## Auto operation

1. Press the MODE button to select Auto.
2. Press the UP/DOWN button to set the desired temperature. The temperature can be set within a range of 17°C ~ 30°C in 1°C increments or decrements.
3. Press the ON/OFF button to start the air conditioner.

### ② NOTE

1. In the Auto mode, the air conditioner can logically choose the mode of Cooling and Fan, by sensing the difference between the actual ambient room temperature and the setting temperature on the remote control.
2. In the Auto mode, the fan speed will be automatically set.
3. If the Auto mode is not comfortable for you, the desired mode can be selected manually.

## Timer operation

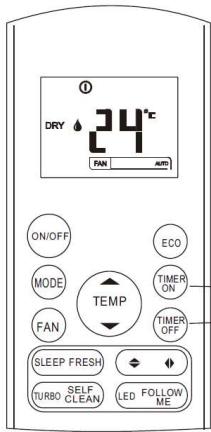

### TIMER ON Setting

1. Press the TIMER ON button. The remote control shows TIMER ON, the last Auto-on setting time and the signal "H" will be shown on the LCD display. Now it is ready to reset the Auto-on time to START the operation.
2. Press the TIMER ON button again to set desired Auto-on time. Each time you press the button, the time increases by half an hour between 0 and 10 hours and by one hour between 10 and 24 hours.
3. After setting the TIMER ON, there will be a one second delay before the remote control transmits timing the signal to the air conditioner. Then, after approximately another 2 seconds, the signal "H" will disappear and the set temperature will re-appear on the LCD display.

### TIMER OFF Setting

1. Press the TIMER OFF button. The remote control will show TIMER OFF, the last Auto-off setting time and the signal "H" will be shown on the LCD display . Now it is ready to reset the Auto-off time to stop the operation.
2. Press the TIMER OFF button again to set the desired Auto-off time. Each time you press the button, the time increases by half an hour between 0 and 10 hours and by one hour between 10 and 24 hours.
3. After setting the TIMER OFF, there will be a one second delay before the remote control transmits the signal to the air conditioner. Then, after approximately another 2 seconds, the signal "H" will disappear and the set temperature will re-appear on the LCD display.


#### CAUTION

- The effective operation time set by the remote control for the timer function is limited to the following settings: 0.5, 1.0, 1.5, 2.0, 2.5, 3.0, 3.5, 4.0, 4.5, 5.0, 5.5, 6.0, 6.5, 7.0, 7.5, 8.0, 8.5, 9.0, 9.5, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23 and 24.

## Example of timer setting

### **TIMER ON (Auto-on Operation)**

The TIMER ON feature is useful when you want the unit to turn on automatically before you return home. The air conditioner will automatically start operating at the set time.

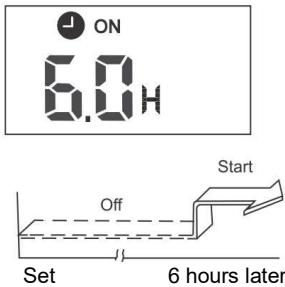


#### Example

To start the air conditioner in 6 hours.

1. Press the TIMER ON button, the last setting of starting operation time and the signal "H" will show on the display.
2. Press the TIMER ON button to display "6.0H " on the TIMER ON display of the remote control.
3. Wait for 3 seconds and the digital display will show the temperature again. The "TIMER ON" indicator will remain on and this function will be activated.

### **TIMER OFF (Auto-off Operation)**

The TIMER OFF feature is useful when you want the unit to turn off automatically after you go to bed. The air conditioner will stop automatically at the set time.

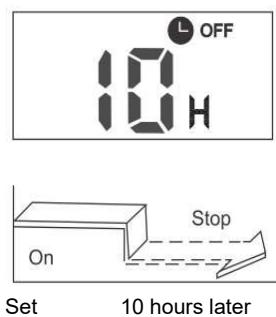

#### Example


To stop the air conditioner in 10 hours.

1. Press the TIMER OFF button, the last setting of stopping operation time and the signal "H" will show on the display.
2. Press the TIMER OFF button to display "10H" on the TIMER OFF display of the remote control.
3. Wait for 3 seconds and the digital display will show the temperature again. The "TIMER OFF" indicator will remain on and this function will be activated.

## COMBINED TIMER

### TIMER OFF → TIMER ON

This feature is useful when you want to stop the air conditioner after you go to bed, and start it again in the morning when you wake up or when you return home.

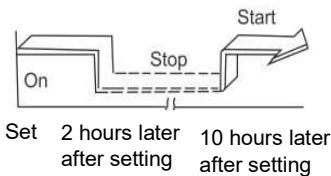


#### Example

To stop the air conditioner 2 hours after setting and start it again 10 hours after setting.

1. Press the TIMER OFF button.
2. Press the TIMER OFF button again to display 2.0H on the TIMER OFF display.
3. Press the TIMER ON button.
4. Press the TIMER ON button again to display 10H on the TIMER ON display.
5. Wait for 3 seconds and the digital display will show the temperature again. The "TIMER ON & TIME OFF" indicator will remain on and this function will be activated.

### TIMER ON → TIMER OFF

This feature is useful when you want to start the air conditioner before you wake up and stop it after you leave the house.

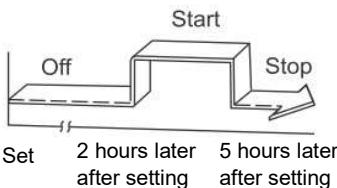

#### Example

To start the air conditioner 2 hours after setting, and stop it 5 hours after setting.

1. Press the TIMER ON button.
2. Press the TIMER ON button again to display 2.0H on the TIMER ON display.
3. Press the TIMER OFF button.
4. Press the TIMER OFF button again to display 5.0H on the TIMER OFF display.
5. Wait for 3 seconds and the digital display will show the temperature again. The "TIMER ON & TIMER OFF" indicator will remain on and this function will be activated.

## Handling the remote control




### Range of use of the remote control.

Use the remote control within a distance of 8 meters from the appliance, and point it at the receiver. Reception is confirmed by a "beep".

#### CAUTION


- The air conditioner will not operate if curtains, doors or other materials block the signals from the remote control to the unit.
- Prevent any liquid from falling into the remote control. Do not expose the remote control to direct sunlight or heat.
- If the infrared signal receiver on the unit is exposed to direct sunlight, the air conditioner may not function properly. Use curtains to prevent the sunlight from falling on the receiver.
- If other electrical appliances react to the remote control, either move these appliances or consult your local dealer.
- Do not drop the remote control. Handle with care.
- Do not place heavy objects on the remote control.

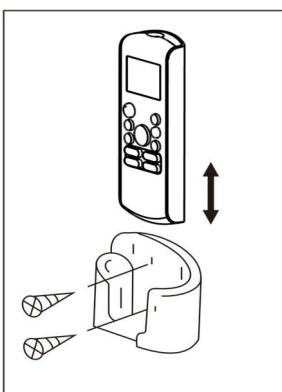

### Using the remote control holder (optional)

- The remote control can be attached to a wall or pillar by using a remote control holder (not included purchased separately).
- Before installing the remote control holder, please check the air conditioner can receive the signals properly.
- Install the remote control holder with two screws.
- For installing or removing the remote control, move it up or down on the holder.

## Batteries replacement

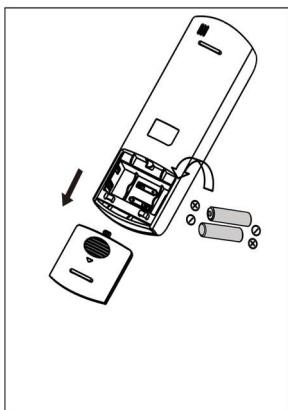

The following conditions indicate that the battery power is exhausted, replace the old battery with a new one.

- No received beeps when sending a signal.
- The indicator light disappears.

The remote control is powered by two dry batteries (R03/LR03X2) which were inserted in the rear compartment and protected by a cover.

- (1) Remove the cover on the rear of the remote control.
- (2) Take out the old batteries and insert the new one, with the (+) and (-) ends positioned correctly.
- (3) Reinstall the cover.

**NOTE:** When the batteries are removed, the remote control will clear all settings. After inserting new batteries, the remote control must be reset.

### **CAUTIONS**

- Do not mix old and new batteries or batteries of different types.
- If you do not use the remote for 2 or 3 months or more controller, please remove the battery.
- Do not dispose of batteries as unsorted municipal waste. Collecting this waste requires special handling.

The design and specifications are subject to change without prior notice for product improvement. Consult with the sales agency or manufacturer for details.